


24/2A Green 12-pin Firewall cable harness - Engine compartment harness

Term.	Female	Male	Color
1	Connector 24/4C:1	Fuse 11C/40:2	GN
2	Junction point 23/412	Fuse 11C/37:2	BL
3	Connector 24/7A:2 (S70/V70) Connector 24/4C:12 (C70)	Fuse 11C/28:2 (S70/V70) Relay heated seat right :3 (C70)	BL-Y GN-BN
4	Connector 24/63:1	Fuse 11C/31:2	Y-VO
5	Connector 24/7B:1 Connector 24/63:4	Fuse 11C/5:2	R
6	Connector 24/4E:1 (C70 LHD) Connector 24/3E:5 (C70 LHD)	Junction point 23/227 (C70 LHD) Fuse 11C/9:2 (C70 RHD)	BL-R R
7	Connector 24/4C:5 (S70/V70) Connector 24/7A:5 (Not C70 RHD) Connector 24/3E:12 (C70 RHD)	Fuse 11C/36:2 (Not C70 RHD) Connector 24/14D:15 (S70/V70 LHD) relay heated seat left :3 (C70 RHD)	Y-W Y-R
8	Control module lock/alarm B:1 (Not C70 RHD) Connector 24/9A:8 (S70/V70) Connector 24/3E:4 (C70 RHD)	Fuse 11C/6:2 (Not C70 RHD) Fuse 11C/12:2 (C70 RHD)	GR-R R
9	Connector 24/3E:2 (RHD) Connector 24/4E:2 (C70 LHD)	Fuse 11C/39:2 (RHD) Engine control module (ECM) B:19 (C70 LHD)	GN-R BL-W
10	Connector 24/3E:6 (RHD) Connector 24/9A:10 (C70 LHD)	Fuse 11C/16:3 (RHD) Connector 24/14D:6 (C70 LHD)	GR-R BL
11	Connector 24/3E:1 (RHD)	Relay rear demist/door mirrors :3 (Not C70 LHD)	Y-R
12	Connector 24/7A:3 Connector 24/61:2	Fuse 11C/30:2	Y-VO

Connector 24/2

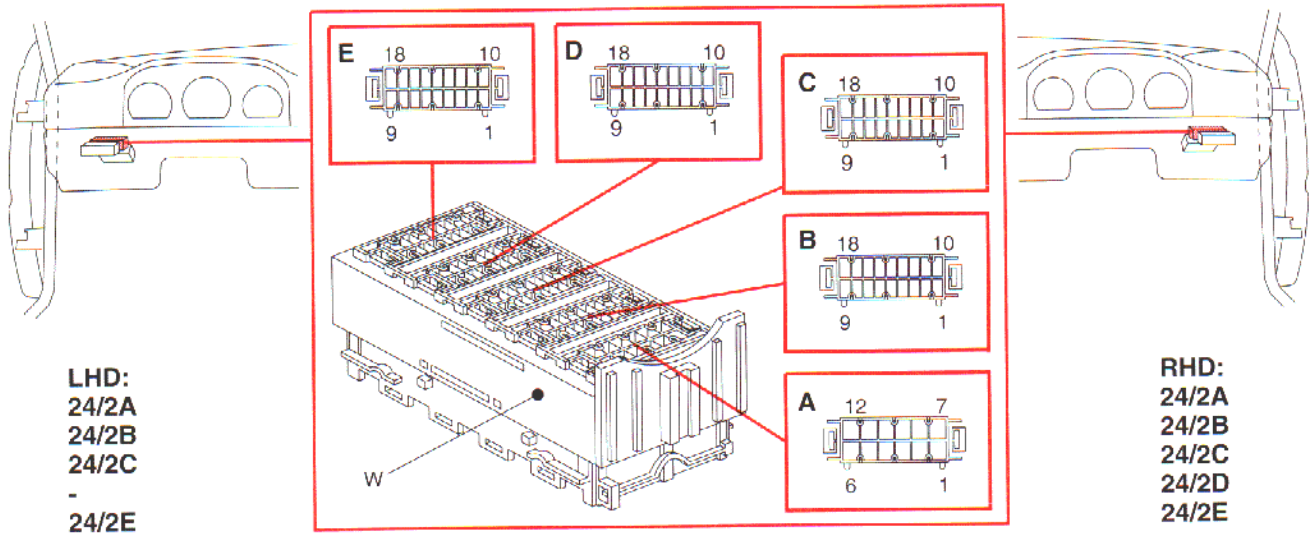

24/2B Light blue 18-pin Firewall cable harness - Engine compartment harness

Term.	Female	Male	Color
1	Connector 24/4B:1	Relay fuel pump (FP) :3	P
2	Connector 24/20A:3 (S70/V70) Connector 24/9A:5 (C70)	Connector 24/13C:17	W
3	Connector 24/20A:2 (S70/V70) Connector 24/9A:6 (C70)	Connector 24/13C:16	GN
4	Junction point 23/411	Fuse 11C/15:2 Antenna ring/ignition lighting :1	R
5	Connector 24/9A:3	Relay seat belt reminder/key warning :5	GR
6	Connector 24/3B:5 (LHD, Not Diesel MOD2) Connector 24/4C:6 (RHD)	seat belt reminder/key warning relay :6 (Not Diesel LHD MOD2)	GR-SB
7	Control module lock/alarm B:10	Fuse 11C/18:1 Ignition switch :S (C70)	BL-GN Y
8	Lock/alarm control module B:9 Radio B:7	Connector 24/13C:3 Control module, cruise control S:8 (S70/V70) Engine control module (ECM) B:18 (S70/V70)	Y-SB
9	Control module lock/alarm A:11	Immobilizer :7	GR-OR
10	Control module lock/alarm B:14	Alarm siren :2	VO-W
11	Connector 24/9A:5 (S70/V70) control module lock/alarm A:22	Connector 24/13D:13 (S70/V70) Alarm siren :3	OR-W
12	Connector 24/9A:6 (S70/V70) control module lock/alarm B:15	connector 24/13D:12 (S70/V70) Alarm :5	P-W
13	Connector 24/4B:10	ABS control module :2	GN-R
14	Connector 24/4B:11	ABS control module :10	GN-Y
15	Connector 24/4B:12	ABS control module :1	GN-W
16	Connector 24/4B:13	ABS control module :17	GN-SB
17	Connector 24/7B:9 (Gasoline)	Control module cruise control S:4	Y-R
18	Control module lock/alarm A:14 (C70)	Fuse 11C/1:1 (C70)	P-SB

**24/2C Yellow 18-pin
Firewall cable harness - Engine compartment harness**

Term.	Female	Male	Color
1	Connector 24/61:10 Connector 24/3D:6 (RHD)	Connector 24/15:7 (MOD1) Connector 24/15:6 (MOD2) Connector 24/14D:6 (LHD)	BL
2	Connector 24/63:3	A/C pressure switch (Pressostat) :1	BL-GR
3	Control module lock/alarm :5 (S70/V70 LHD) Junction point 23/424 (C70 RHD) Connector 24/7A:10 (C70 LHD)	Connector 24/14D:16 (LHD S70/V70) Fuse 11C/1:2 (C70) Relay left heated seat :2 (C70 LHD)	GR-SB P-SB Y-R
4	Connector 24/3C:9	Connector 24/13D:5	BL-BN
5	Connector 24/4E:4 (LHD) Control module lock/alarm A:19 (S70/V70 LHD) Connector 24/7A:2 (C70 RHD)	Engine control module (ECM) B:15 (LHD gasoline) 15l-rail (C70)	BL-GN BL-Y
6	Connector 24/4E:5 (LHD) Connector 24/7A:10 (C70 RHD)	Engine control module (ECM) B:31 (LHD gasoline) Left heated seat relay :2 (C70)	OR-SB Y-R
7	Connector 24/4E:6 (LHD) Connector 24/7A:8 (C70 RHD)	Junction point 23/221 (LHD gasoline) Right heated seat relay :1 (C70)	BN-P GN-BN
8	Connector 24/50:10 Control module lock/alarm A:23	Connector 24/13D:6 Relay seat belt reminder/key warning :3 (S70/V70)	W-SB
9	SRS Sensor module :5	Junction point 23/239	Y-VO
10	Junction point 23/428 (Not S70/V70 MOD2) Connector 24/50:18 (S70/V70 MOD2) Connector 24/60:18 (S70/V70 MOD2)	Rear demist/heated door mirrors relay :4 Connector 24/13A:11	Y-R
11	Connector 24/7A:1 (S70/V70) Control module lock/alarm B:1 (C70 RHD) Connector 24/7A:2 (C70 LHD)	Fuse 11C/9:2 (S70/V70) Fuse 11C/6:2 (C70) 15l-rail (C70 LHD)	R BL-Y
12	SRS Sensor module :10	Contact reel steering wheel SRS :1	OR
13	SRS Sensor module :11	Contact reel steering wheel SRS :2	SB
14	SRS Sensor module :12	Connector 24/13C:7 Connector 24/15:3 Engine coolant heater :4 (Diesel)	R-W
15	Connector 24/4E:1(S70/V70 LHD MOD2) Connector 24/9A:9 (C70)	Junction point 23/227 MOD2 S70/V70) Connector 24/13A:8 (C70)	BL-R BN-OR
16	Connector 24/4E:2 (S70/V70 LHD MOD2) Connector 24/7A:5 (C70 RHD) Connector 24/7A:8 (C70 LHD)	EVAP canister shut-off valve :2 Engine control module (ECM) B:19 (LHD MOD2 gasoline S70/V70) Fuse 11C/36:2 (C70) Right heated seat relay (C70 LHD)	BL-W Y-W GN-BN
17	Control module lock/alarm B:5 Connector 24/60:10	Connector 24/13D:10	Y-BN
18	Junction point 23/421	Junction point 23/222 (Not gasoline S70/V70) ABS control module :13 (C70) Immobilizer :3 (C70) Control module AW 50-42 B:22 (C70 LHD) Engine control module (ECM) LHD)	W

**24/2E White 18-pin
Firewall cable harness - Engine compartment harness**

Term.	Female	Male	Color
1	Shift lock solenoid :1	Stop (brake) lamp switch :3	GN
2	Mode selector AW 50-42 :2	Control module AW 50-42 :17	BN-GR
3	Mode selector AW 50-42 :1	Control module AW 50-42 :16	GN-OR
4	Mode selector AW 50-42 :5	Connector 24/13C:2 Control module AW 50-42 :7 (S70/V70)	GR-OR
5	Connector 24/3C:2 (LHD) Junction point 23/421	Connector 24/13B:9	W
6	Connector 24/7B:3	Immobilizer :1 (Gasoline)	Y-BN
7	Control module lock/alarm A:24 Connector 24/9A:2	Antenna ring/Key lighting :5	P-SB
8	Catalytic converter thermocouple :1	Exhaust temperature sensor relay :1	W-SB
9	Catalytic converter thermocouple :2	Exhaust temperature sensor relay :5	BN
10	Connector 24/50:12	Ground rail, power ground	SB
11	Junction point 23/440 Mode selector AW 50-42 :4 (MOD2) Control module lock/alarm B:8 (MOD2)	Fuse 11C/2:2	BL-R
12	Control module lock/alarm A:26	Fuse 11C/13:3 Connector 24/13D:18	R-SB R
13	Control module lock/alarm B:21	Relay starter motor :4	SB
14	Control module lock/alarm A:13	Junction point 23/208	BL-GN
15	Control module lock/alarm A:12	Junction point 23/207	GN
16	Control module lock/alarm A:3	Hood alarm switch :1	Y-SB
17	Control module lock/alarm B:18	Relay alarm horn :4	Y-R
18	Control module lock/alarm B:4	Connector 24/13D:11	R